

## Data Sheet Compatherm Pads 9411

Compatherm Pad 9411 is a cost effective thermally conductive interface material. The material is a filled thermally conductive elastomer which provides good thermal performance with great reliability.

Compatherm pad 9411 key properties

- 1.2 W/(mK) thermal conductivity
- Operating temperature -40 to +150° C
- Compliant elastomeric based material
- Naturally tacky on both sides, customised surface available
- Available in thickness from 0.5 to 5mm

### 1. Applications

Compatherm pad 9411 is designed to provide efficient heat transfer for cooling of modern electronics.

### 2. Typical Product Data

#### 2.1. Thermal Properties

	Test procedure	Unit	9411
Thermal conductivity	ISO 22007-2 (Hot Disk)	W/(mK)	1.2
	ASTM D5470	W/(mK)	1.2


#### 2.2. Material properties

	Test procedure	Unit	9411
Base material			Silicone
Colour	Visual		Light blue
Hardness	ASTM D2240	Shore 00	9
Density	ASTM D792	g/cm <sup>3</sup>	2.1
Outgassing, TML <sup>1)</sup>	ASTM E595 (Modified)	%	0.59
Flammability <sup>2)</sup>	UL94		V0


1) Outgassing 24h at 150 °C under ambient pressure. 2) Tested at third-party accredited laboratory & the test report available on request.


## 2.3. Electrical Properties

	Test procedure	Unit	9411
Volume resistivity	ASTM D257	$\Omega \cdot \text{cm}$	$1.71 \times 10^{13}$
Dielectric constant at 1 MHz	ASTM D 150		6.62
Breakdown voltage	ASTM D 149	VAC	8000

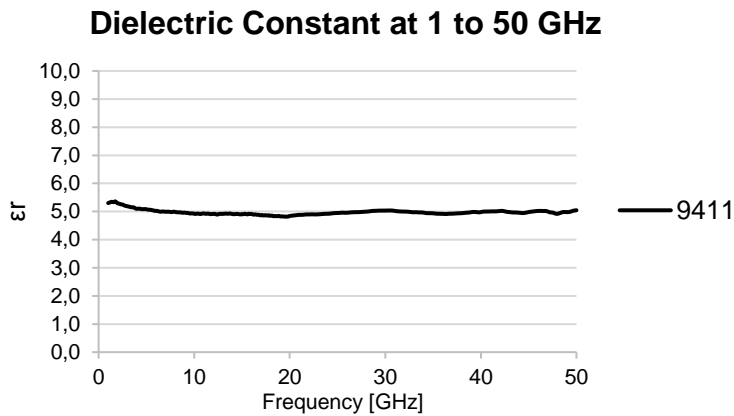

## 2.4. Pressure dependence of critical properties

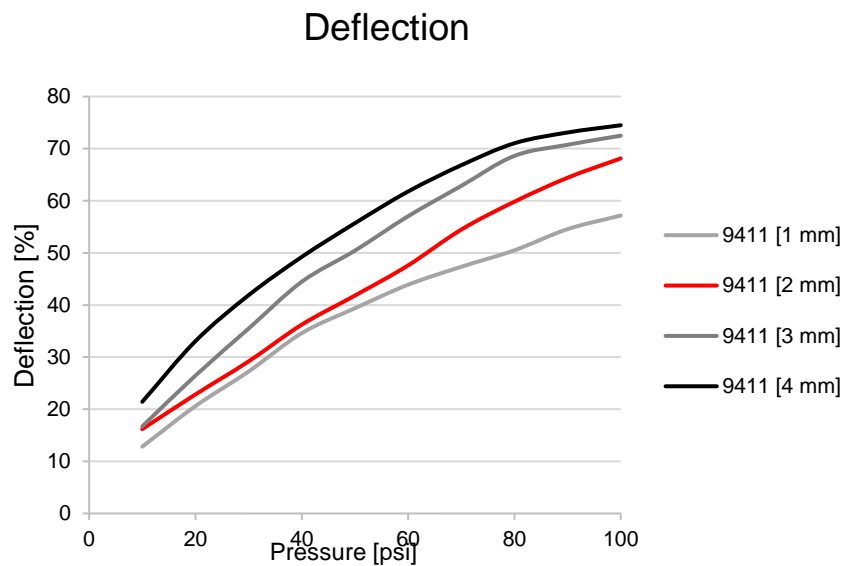

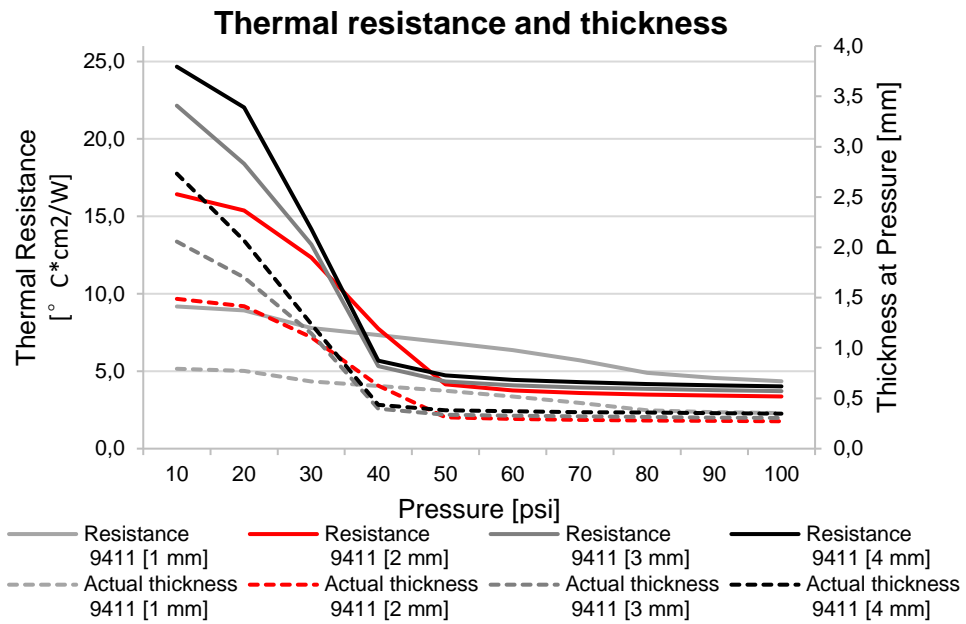

\* Graphs are provided for general reference only. Actual performance will depend on surface properties and other application specific conditions. Engineers are therefore strongly recommended to test materials in conditions realistic to final application.

## 2.5. Dimensions Tolerances

Thickness tolerances are  $\pm 0.1$  mm on pads thinner than 1 mm and  $\pm 10\%$  on pads thicker than 1 mm.

XY tolerance is  $\pm 1$ mm on standard sizes. The tolerances on custom made pads varies please consult the Nolato marketing department.

## 2.6. Design Notes

It is recommended to use the material in up to 20%-30% of compression degree. A compression degree of 50% is possible to use but above that level is a thinner pad recommended.

## 3. Ordering

When ordering Compatherm material please refer to the thermal guide ( <https://thermalguide.nolato.com/> ) to see the standard products available or consult the Nolato marketing department.

Specialized pads are available in different shape and surface properties. See application note 1 for detailed information on customized surfaces.

## 4. Storage

The material can be stored one year after production date at 0 to 30°C.

## 5. RoHS Information

Compashield pad 9411 fulfils the requirements set by the EU Directive 2011/65 (RoHS).

## 6. Safety Instructions

Compashield pad 9411 is not considered as hazardous according to EU Directive 1272/2008 (CLP) and is not subject to the directive of classification, packaging and labelling of dangerous goods. A material safety data sheet can be sent on request.

## 7. Warranty

The recommendations and data given are based on our experience to date, however, no liability can be assumed in connection with their usage and processing. The typical property data as shown above should not be used as a specification.