
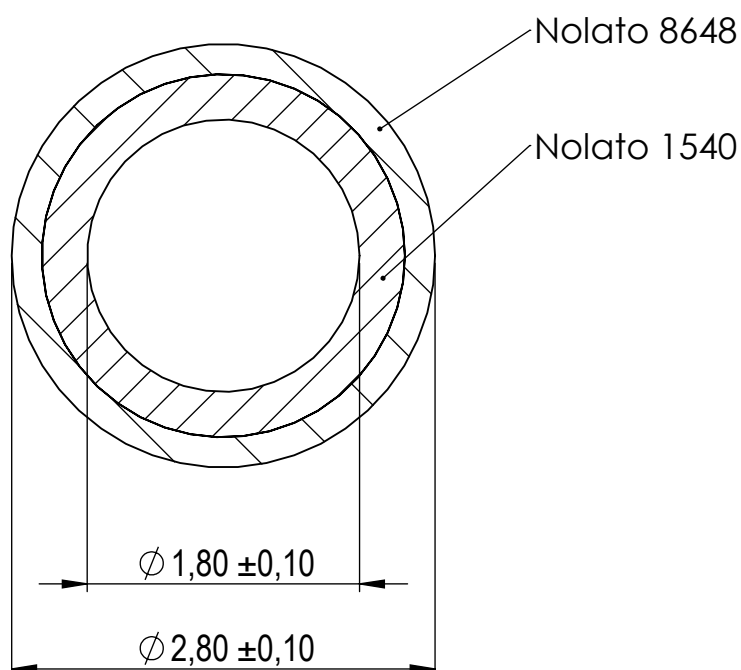


Compashield® splice quality requirements:


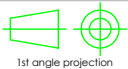
No reduction of the shielding properties in the splicing area. Splicing rubber thin and conductive.
 No flash, porosity or excess rubber at the joint after splicing.
 Max increase of compression force in the splicing area 5%. No excess splicing rubber inside hollow profiles.
 Joining point should stand for 10% stretch without mechanical damage

Cross-section area3,6 mm²**Electrial resistance measure:**

Methode: Nolato R3 Max: 300 mOhm



REVISIONS							
REV.	DATE	DESCRIPTION	Art.nr	Material	Length	Weight/m	Splice
			1262900	8648/1540	Roll	3,92/2,18g	No
			1262901		250±2mm		No
			1262902		250±2mm		Yes

		Document name Compashield Soft Hollow O-shape					
		Sheet scale 20:1	Sheet size A4	Document no. P2629:16:001	Rev no. B	Nolato art. no. 1262900	
General tolerances SS ISO 3302-1 M3				Drawn by K.L		Checked by P.Å	Date 2015-05-06
				Reference cad data 1262900 PA Compashield Soft Hollow O-shape			