


Compashield E-E Profiles

The E-E-profiles are an invention by Nolato for solving the dual problem of protecting electronic enclosures from both environmental and EMI disturbance. It is a combined gaskets that has an environmental seal of pure silicone facing the outdoor environment and an EMI-seal made of conductive silicone towards the inside electronics, both in one profile. Typical use is out-door applications within the telecom sector.



The E-E profiles can also in an economical way be delivered spliced into endless O-rings by use of the patented Compashield Splicing Tool. This can in many application be an advantage to make assembly easier and to ensure that no gap can occur over time.

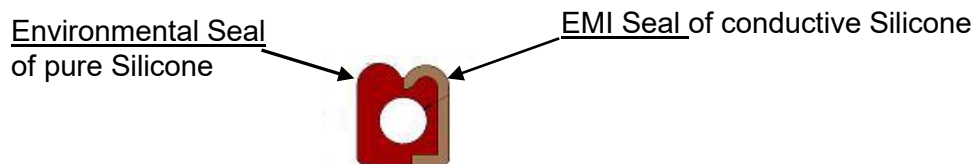

Nolato Silikonteknik AB

Europe
+46 582 88900

China
+86 186 008 8696

Malaysia
+60 16 743 5988

India
+91 98847 22707

USA
+1 651 955 9505



www.nolato.com/silikonteknik