



Compashield Hollow O-strip:

Hollow O-strip is a universal, very common type of gasket. The hole in the cross section makes it easier to compress, thus it offers lower compression force than the Solid o-strip. Easy to use, easy to assemble. Normally mounded in a groove.

Hollow O-strip Soft is a variant developed by Nolato that has an inner layer of very soft elastic pure silicone and outside a layer of our conductive silicones for the shielding properties. The Hollow O-strip Soft offers better mechanical properties than the standard Hollow O-strip, especially compression set, and very low compression force.

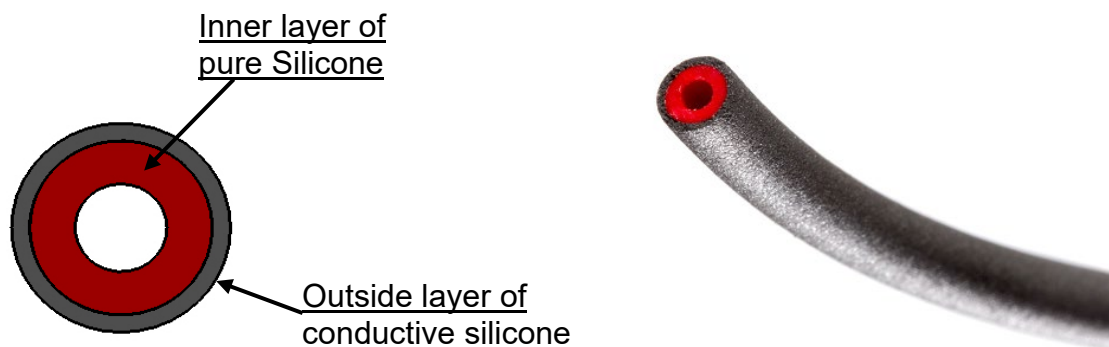

Both types can in an economical way be delivered spliced into endless O-rings by use of the patented Compashield Splicing Tool. This can in many application be an advantage to make assembly easier and to ensure that no gap can occur over time.

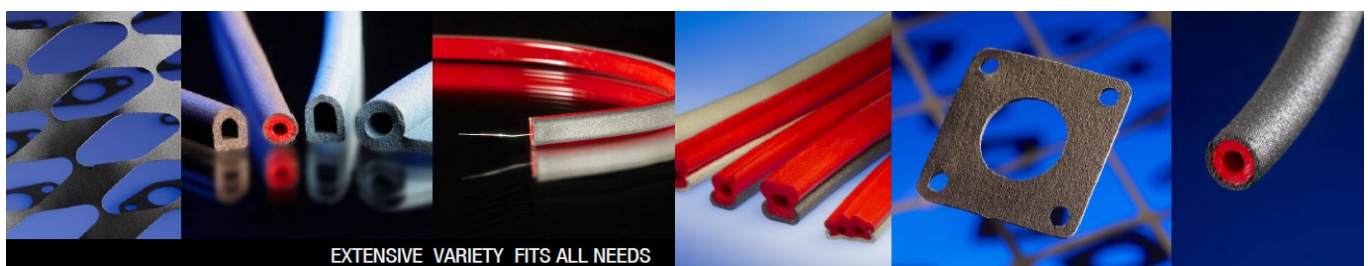

Nolato Silikonteknik AB

Europe
+46 582 88900

China
+86 186 008 8696

Malaysia
+60 16 743 5988

India
+91 98847 22707

USA
+1 651 955 9505



www.nolato.com/silikonteknik